



FITTING INSTRUCTIONS FOR


Standalone Rear Roof Shelf

SKU

KS0608

COMPATIBILITY

Jeep Wrangler JL

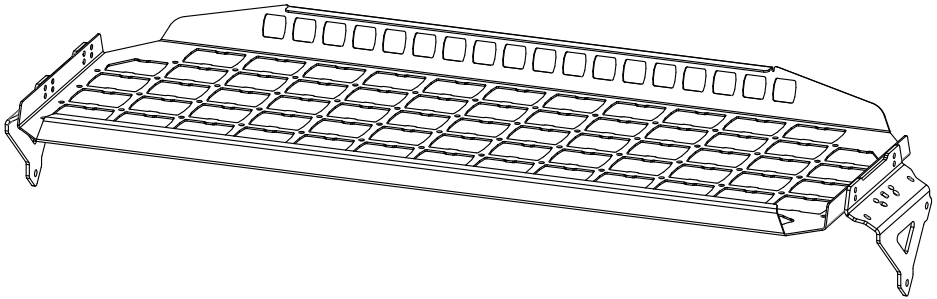

Included contents

| QTY | COMPONENT | QTY | COMPONENT |
|-----|-------------------|-----|----------------------------------|
| 1 | Rear Roof Shelf | 4 | M6 x 16 Flanged Hex Bolt |
| 2 | Mounting Brackets | 4 | M6 Flanged Nut |
| | | 4 | M8 x 20 Button Head Socket Screw |



Time

15mins / Few swigs of beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or info@kaon.com.au



Bolt Torque

| DIAMETER (mm) | 5mm | 6mm | 8mm | 10mm | 12mm |
|--------------------|------|------|-------|-------|-------|
| NEWTON-METRES (Nm) | 5 Nm | 9 Nm | 22 Nm | 44 Nm | 77 Nm |

Let's get to work.

Preparation

1. Remove the trim panels on each side of the roll cage to reveal the captive mounting points.
2. Before commencing the install, decide if you want to mount your shelf in the upper or lower position. If you have purchased two shelves, skip to page 4 to install them simultaneously.



Installation

- 3. For the upper mounting position:** secure the mounting bracket to the roll bar using the provided M6 bolts and washers, in the orientation pictured.
- 4. For the lower mounting position:** secure the mounting bracket to the roll bar using the provided M6 bolts and washers, in the orientation pictured.
- 5.** Position the shelf and attach to the mounting brackets using M6 flanged bolts and nuts.
- 6.** Once the shelf is in the desired position, tighten all bolts securely.
- 7.** That's it! Your new shelf is able to hold a recommended maximum load of 10kg.

It's also got twin bottle openers on each side, and the bracket can be used to secure rock lights for additional internal lighting, or other accessories.



Dual Shelf Installation

- 3. To install two shelves in the upper and lower positions simultaneously:** sandwich the mounting brackets and secure to the roll bar using the provided M6 bolts and washers, as pictured.
4. Position the upper shelf first, and attach to the mounting brackets using M6 flanged bolts and nuts.
5. Position the lower shelf and attach to the mounting brackets using M6 flanged bolts and nuts.
6. Once the shelves are in the desired positions, tighten all bolts securely.
7. That's it! Your new shelves are each able to hold a recommended maximum load of 10kg.

They've also got twin bottle openers on each side, and the bracket can be used to secure rock lights for additional internal lighting, or other accessories.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.