



FITTING INSTRUCTIONS FOR


Standalone Rear Roof Shelf

SKU

KS0818

COMPATIBILITY

Toyota Prado 90

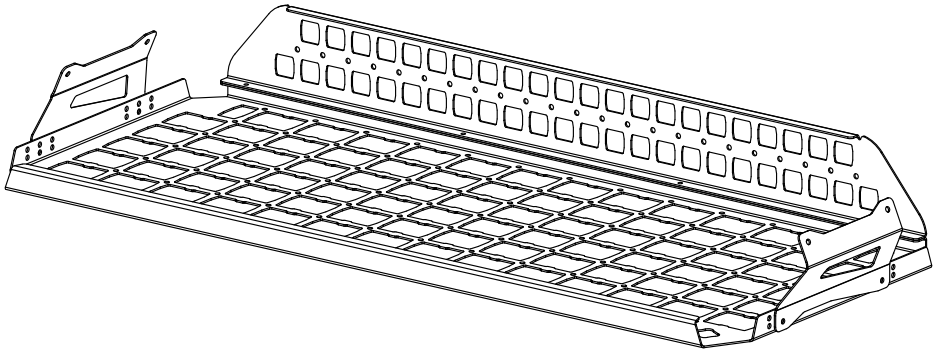

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Standalone Shelf	4	M5 x 12 Flanged Hex Bolt G8.8
1	Rear Fence	4	M5 Flanged Nut
2	Handle Bracket (LHS & RHS)	4	M6 x 16 Flanged Hex Bolt G8.8
		4	M6 Flanged Nut



Time

30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or info@kaon.com.au



Bolt Torque

DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	5 Nm	9 Nm	22 Nm	44 Nm	77 Nm

Let's get to work.

Installing the Handle Brackets

1. Locate the rear grab handles in the vehicle, and remove the plastic covers with a small trim tool or screwdriver, exposing the bolts.
2. Using a screwdriver or socket with extension, unscrew the factory bolts and remove both rear grab handles. Set aside.
3. Layer the Handle Bracket underneath the rear grab handle, threading the factory bolts through the holes as pictured.
4. You will notice that each handle bracket has an angled opening in the centre. On each side, the narrower end of the opening must be pointing to the back of the vehicle to be in the correct orientation, as pictured.
5. Re-install the rear grab handle with the Handle Bracket layered underneath. Tighten the factory bolts and clip the plastic covers back over the bolts to cover.
6. Repeat on the other side.

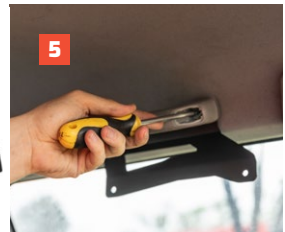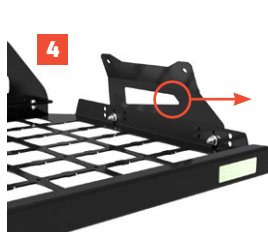

Assembling the Shelf

7. Attach the rear fence to the shelf using M5 nuts and bolts.
8. Tighten to secure.



Installing the Shelf

9. With the brackets up, it's time to install the shelf itself. Whilst this can be done on your own, you may find it easier to ask a mate for help.
10. There are a couple of positions for adjustment in your shelf's positioning – it can be moved forward or backward, and has two height settings, as pictured.
11. Position the shelf and use the M6 bolts and nuts to install the shelf to the bracket.
12. With the shelf position confirmed, tighten all the bolts.
13. That's it! Your new shelf is able to hold a recommended maximum load of 10kg, evenly spread across the shelf.





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of its products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve its products and reserves the right to make changes to any product.