FITTING INSTRUCTIONS FOR


Light Cargo Barrier

SKU

KS0005

COMPATIBILITY

Toyota FJ Cruiser

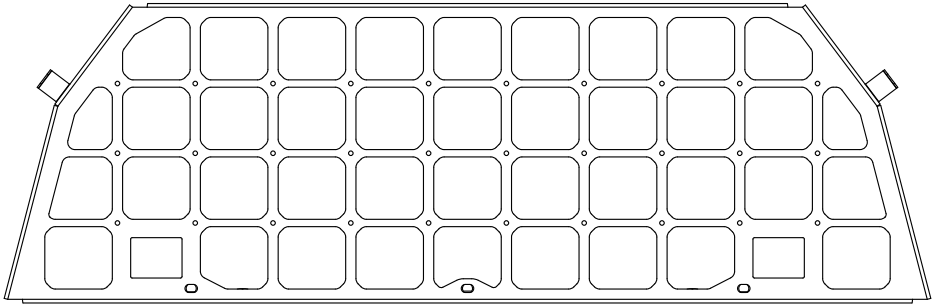

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Light Cargo Barrier	2	M6 x 16 Flanged Bolt
3	Headrest Bracket	4	M6 x 18 x 1.5 Washer
2	Barrier Bracket	1	M10 x 20 Black Plastic Knob
2	M6 Adjustable Handle	3	M10 x 20 Button Head Socket Screw
		3	M10 x 30 2.5 Washer

Time 30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road. We cannot confirm compatible fitment of the this barrier with child restraints, due to the number of possible variations. Whilst it may work with your configuration, we recommend the use of a seat belt protector where any contact occurs between any seat belt or restraint and the barrier.

Preparation


1. Remove the hooks in the rear cargo area. Use a pry tool to open the plastic covers on each side and remove the M6 bolts with a 10mm socket wrench.
2. Remove the head rests and slide on the head rest brackets. Re-install the head rests with brackets in place.

   To be in the correct orientation, the folded tab with the M10 nutsert should be pointing upwards to the roof, and be facing toward the back of the vehicle as pictured.



Assembling the Barrier

3. Attach the barrier brackets to the barrier using the supplied M6 bolts and washers, as pictured. The smaller tab before the fold in the barrier bracket should be attached to the barrier, and bracket should fold away from the barrier.

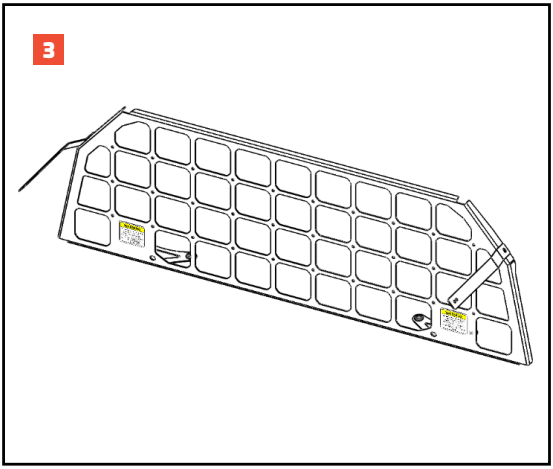

Installation

4. Position the main barrier against the head rests. The flanged edge on the barrier should be directed forwards, and the warning stickers should be visible from the rear of the vehicle.
5. Loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer. An M10 knob is provided if you would like the option of easily folding down the 40-split seat.
6. The barrier brackets can now be attached to the vehicle in the spot the factory M6 bolt was previously, using the M6 adjustable handle.
7. Confirm the position of the barrier. Once in the desired position, tighten all bolts and knobs securely.
8. That's it – you're done!
   The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.