
FITTING INSTRUCTIONS FOR

DCDC Charger Bracket

SKU	COMPATIBILITY
KS0201	***Toyota Prado 150 (2018-2024)***

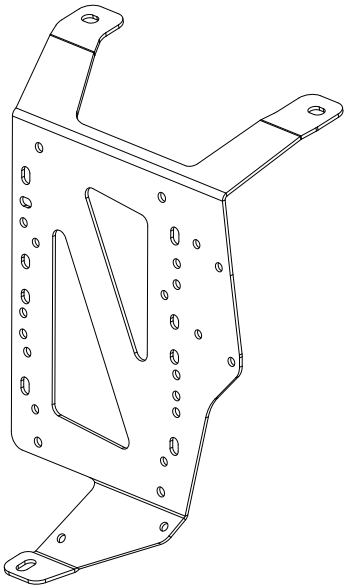

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	DCDC Charger Bracket	2	M4 x 16 Socket Head Cap Screw
4	M5 x 12 Flanged Bolt	2	M4 Nyloc Nut
4	M5 Flanged Nut		

Time 15 minutes / Quarter of a beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**


G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Installation

1. Remove the plastic splash guard in order to gain access to the space in front of the Radiator.
2. Remove the lower factory M6 bolt, and place the charger bracket in position.
3. Secure the top of the bracket to the vehicle using the supplied M6 bolts, and secure at the bottom reusing the factory M6 bolt. Tighten the hardware until secure.
4. It's now time to attach your accessories. You can attach a charger to the bracket using the supplied M5 hardware, or use the M4 hardware if you're mounting a midi fuse holder.

   You can now wire up your accessories to suit your setup needs. We'll leave that part up to you.
5. Reattach the factory splash guard.
6. That's it - you're done!

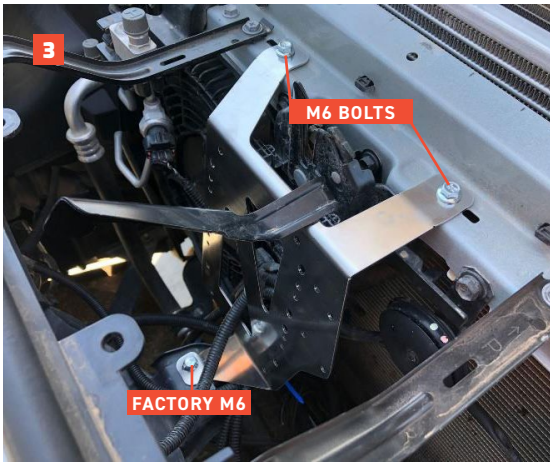



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.