FITTING INSTRUCTIONS FOR


Bonnet Hinge Antenna Mount

SKU

KS0276/277

COMPATIBILITY

Toyota Prado 150

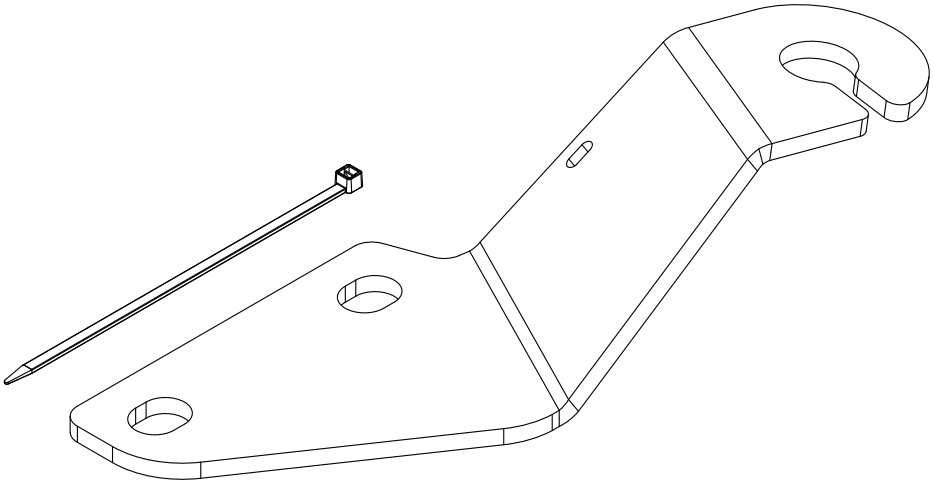

Included contents

QTY	COMPONENT
1	Antenna Mount Bracket
1	Small Cable Tie

Time 30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm

Let's get to work.

Preparation

1. First things first, mark the position of your bonnet relative to the hinge. This is to ensure that you can restore it the bonnet it's factory positioning after the install.



Installation

1. Use a 12mm ring spanner, remove both hinge bolts. We suggest having someone on hand to hold the bonnet in position while you do this, as once the bolts are loose the bonnet may move. Installation cont.



2. With the bolts removed, sandwich the hinge bracket between the Antenna Mount and bonnet, as pictured.
3. Loosely reinstall the factory bolts.
4. With the bolts in place, adjust the bonnet back to it's factory position, referencing the marks we created earlier. Tighten the bolts slightly, so they are securely in place.
5. With the bolts secured, slowly and gently close the bonnet to confirm that the Antenna Mount doesn't foul on the bonnet. You want to check that there is an even gap to the bonnet, as well as an even gap underneath.
6. With the placement confirmed, open the bonnet again and torque all bolts until tight.
7. Now all that's left to do is to run an aerial or light! Our bracket is slotted to make this super simple, and there is also a opening on the bracket and a small cable tie included in the kit to make running the cable neater.

   We find the easiest way of installing the antenna is with the bonnet open, allowing free access to both sides.









Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.