
FITTING INSTRUCTIONS FOR

Light Cargo Barrier

SKU	VARIANT	COMPATIBILITY
KS0606	***7-Seater***	***Toyota Prado 150, Lexus GX 460***

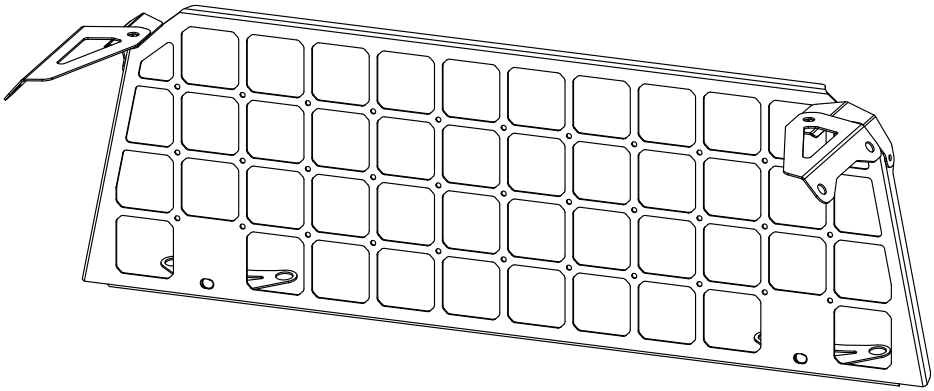

Included contents


QTY	COMPONENT	QTY	COMPONENT
1	Light Cargo Barrier	2	M6 X 18 X 1.6 DIN Flat Washer
2	Head Rest Bracket	2	M10 x 20 Button Head Socket Screw
2	Handle Bracket (LHS & RHS)	2	M10 x 30 x 2.5 DIN Flat Washer
2	Barrier Bracket (LHS & RHS)	2	M6 x 16 Flanged Hex Bolt G8.8
2	M10 x 20 Black Plastic Knob		

Time	30 minutes / Half a beer

Scan the **QR code** to watch the video installation guide,
or for further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

It all works together.

All our storage products work together, but there is a certain order to installing.
Let's work out the best order for your setup, shall we?

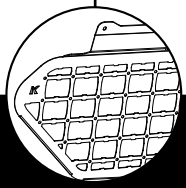

Are you installing a Side Molle Panel?

YES


Assemble the Molle Panel as per it's instructions. Now's the time to mount any additional accessories to the Molle as well.

Are you installing other KAON Storage Products?

NO

Complete the Molle Panel as per it's instructions.

NO

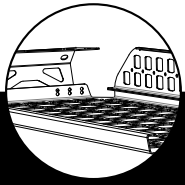

Are you installing a Standalone Shelf?

YES


Follow the Shelf fitting guide, and if relevant, the Side Molle option for your setup. Complete the Shelf & Molle install.


Are you installing other KAON Storage Products?

NO

That's it, you're done!

YES

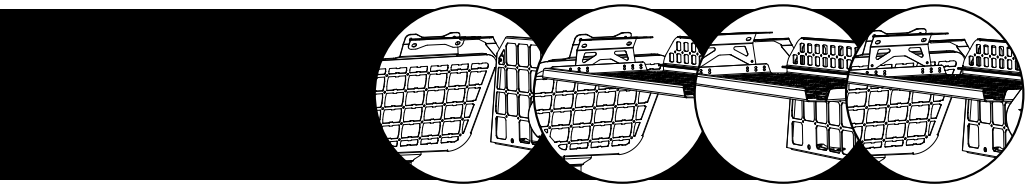

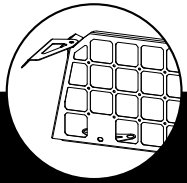

Are you installing a Light Cargo Barrier?

NO

YES

The last piece of the puzzle, complete your install by following the Light Cargo Barrier fitting guide.

Are you installing other KAON Storage Products?

YES

NO

That's it, you're done!

YES

With the foundation in place, it's time to mount any other accessories, such as a Cargo Divider, Travel Buddy, etc. Have fun making it your own.

With your setup order sorted, let's get to the good part: installing. →

Let's get to work.

Preparing the Vehicle

1. Pry open the plastic covers on the rear grab handles with a small flatblade screwdriver or trim tool.
2. Use a 10mm socket to remove the rear handles. Set aside.







Installing the Brackets

To install the Light Cargo Barrier:

3. Install the handle brackets to the roof mounts, as pictured. Ensuring the nutsert is towards the front of the vehicle, tighten to secure.

To install with the Standalone Shelf

4. Follow the instructions provided with the Standalone Shelf, then skip to step 10 below.


   Please note pre-2023 Standalone Shelves (KS0265) require the shelf bracket to be layered. Refer to our website for more details.

To install with the Side Molle Panels:

5. Ensure you have the correct molle panel for each side, with the 'K' positioned at the back of the vehicle.
6. Sandwich the barrier handle brackets over the Molle Panel top mounts. Ensuring the handle bracket nutsert is towards the front of the vehicle.
7. Secure the top using the M6 bolts and washers.
8. Install the Side Molle Panel lower mount bracket using it's included M6x50 bolt.
9. Check the spacing and position of the Side Molle Panel, and tighten all bots to secure.






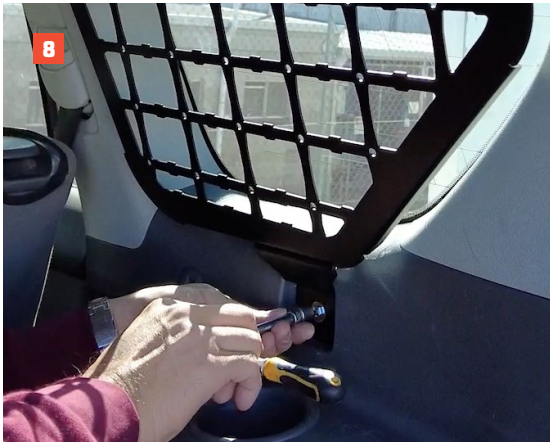

Assembling the Barrier


10. Attach the barrier brackets to the barrier using the supplied bolts, ensuring that the barrier brackets are attached in the correct orientation.

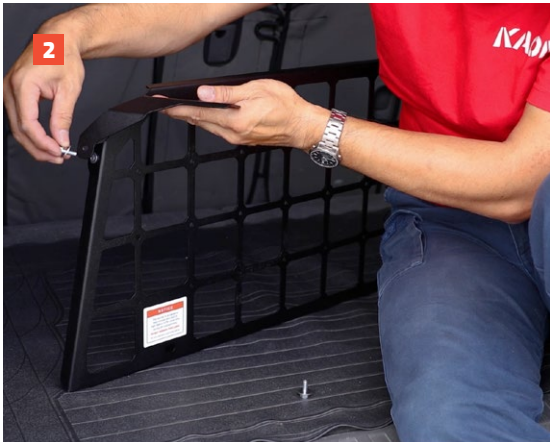

Installing the Barrier

11. Remove the head rests and slide on the head rest brackets. Re-install the head rests with brackets in place.
12. Position the main barrier against the head rests. The flanged edge on the barrier should be directed forwards, and the warning stickers should be visible from the rear of the vehicle.
13. Loosely secure it to the head rest brackets using the M10 domed head bolts and M10 washer.
14. Attach the barrier bracket to the handle bracket nutsert using the M10 knob. You can adjust the position of the barrier by selecting the most suitable hole in the barrier bracket.
15. Once the barrier is in the desired position, tighten all bolts and knobs securely. That's it, you're done! The barrier can be quickly removed by removing the plastic knobs and lifting out the head rests.



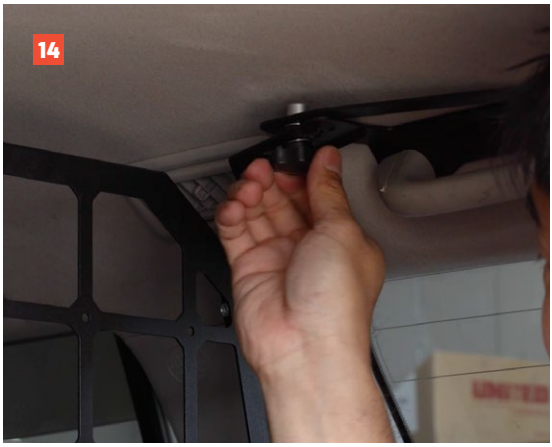



NOTICE

This barrier has not been tested to Australian Standards, and is intended as a pet barrier or for use when off-road.

G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.