FITTING INSTRUCTIONS FOR


Paper Towel Holder

SKU

KS0911

COMPATIBILITY

KAON Molle Mesh

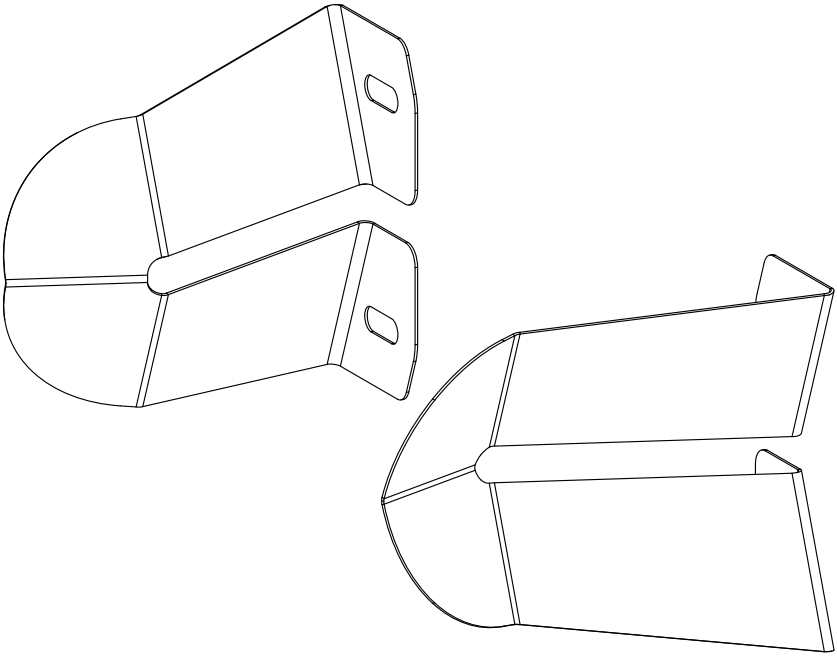

Included contents

QTY	COMPONENT	QTY	COMPONENT
2	Paper Towel Holder Bracket	4	Black M6 Flanged Nut
4	Black M6 X 18 X 1.5 Flat Washer	4	Black M6 x 12 Button Socket Screw

Time 5 mins / Few swigs of beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

Let’s get to work.

KAON Molle Mesh Installation w

1. Locate where you want to position the paper towel, ensuring clearance to anything else in your setup.

   The Holder is compatible with the signature KAON mesh found on Shelves, Molle Panels, Dividers and Rear Window Baskets, and runs across the mesh (horizontally).

2. The holder fits standard 22cm AU paper towel rolls. Position them four holes apart, as pictured.

   Using a roll will make it easier to identify the correct spacing between the brackets.

3. Loosely attach both brackets with the provided M6 hardware so that the points formed by the folds face each other.

4. Confirm the position of the brackets is correct. The towel should be able to be pushed in between the two brackets, with some resistance.

5. Tighten all bolts until secure.

6. That's it, you're done! Now all that's left is to add your towel and go.







Universal Installation

7. If you're installing this on a non-KAON product / surface, follow the steps below. Please note that screws are not included, so you'll need to source your own if you choose to attach the holder this way.

8. First locate where you want to position the paper towel, ensuring adequate clearance to anything else in your setup.

9. The holder fits standard 22cm AU paper towel rolls. Mark out a grid positioned 60 mm down and 220 mm across.

   If your preferred paper towel is wider or narrower, adjust your marks accordingly.

10. Drill pilot holes at the marked points. If you are using the bolts provided, drill out the holes to the finished size.

11. Secure the paper towel holder with the bolts provided, or screws if preferred.

12. That's it, you're done! Now all that's left is to add your towel and go.



G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm



Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.