FITTING INSTRUCTIONS FOR


ARB Single Air Compressor Mounting Bracket

SKU

KS0954

COMPATIBILITY

Toyota Prado 250

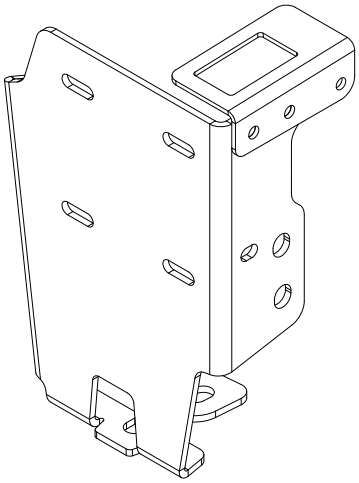

Included contents

QTY	COMPONENT	QTY	COMPONENT
1	Compressor Mounting Bracket	3	Black M5 Flat Flanged Nut
1	Switch Mounting Bracket	2	M6 x 20 Flanged Hex Bolt G8.8
2	M8 x 17 x 1.2 Washer	4	Black M6 x 16Flanged Hex Bolt G8.8
2	M8 x 30mm Hex Bolt	4	Black M6 Flat Flanged Nut
3	Black M5 x 12mm Flat Flanged Bolt	4	Black M6 X 18 X 1.5 Flat Washer

Time 30 minutes / Half a beer

For further information contact KAON on **07 3180 1470** or **info@kaon.com.au**

G8.8 Bolt Torque (Non-Lubricated)					
DIAMETER (mm)	5mm	6mm	8mm	10mm	12mm
NEWTON-METRES (Nm)	6 Nm	10 Nm	15 Nm	22 Nm	35 Nm


Let's get to work.

Preparation

1. Secure the ARB Mounting Plate from your Air Compressor Kit to the KAON Compressor Mounting Bracket. The brushless compressor plate is shown here, but our Mounting Bracket is also compatible with the brushed compressor.
2. Rotate the tank to the position shown before securing the Air Compressor to the ARB mounting plate as per ARB's provided instructions.
3. Secure the provided Switch bracket to the Air Compressor Bracket. If you will be running your switch into the vehicle dash, you can skip this step.






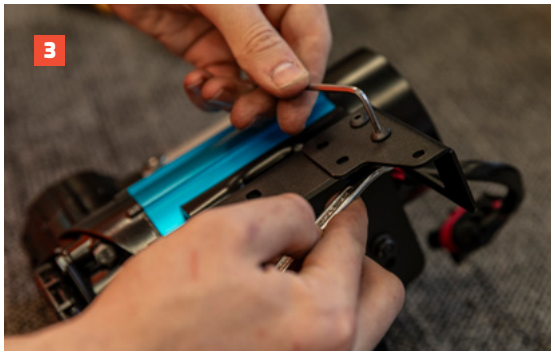



Installation


4. Before proceeding with the install, we recommend unbolting the positive battery terminal leads and moving them aside, then covering the terminal. As we will be working adjacent to the battery, this helps eliminate the risk of a short circuit.
5. Unbolt the grounding point on the side wall and temporarily move the wires aside. As an optional step, you can tape the engine bay floor to reduce the risk of scratching the paint.
6. Position the compressor and mounting bracket assembly in the vehicle, aligning it with the captive mounts. Secure it using the supplied M8 bolts, ensuring the grounding point is reinstated on top of the bracket before tightening.
7. Secure the bracket to the floor of the engine bay using the provided M6 bolts.
8. Follow ARB's instructions to complete the installation, including connecting the air compressor fittings (ensuring the air fitting is oriented as pictured), and finalising the wiring and switch routing. Ensure to reconnect your battery terminal also.

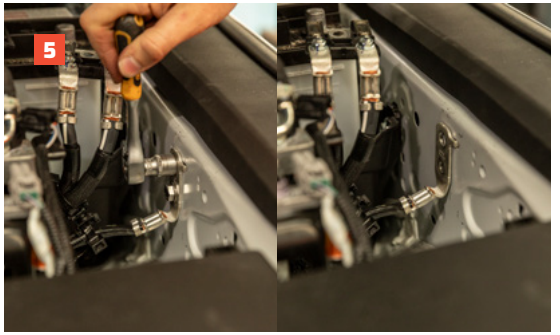



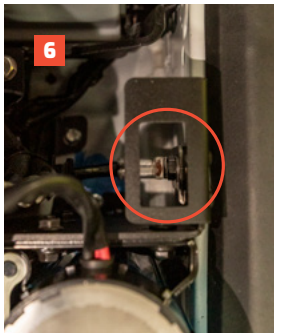

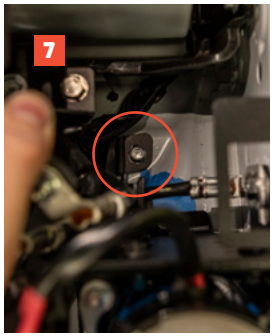

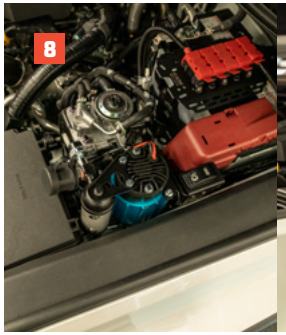





Local Knowledge & Assistance

We know half the fun of building your dream 4x4 is getting your hands dirty. But we also know that sometimes, things don't go to plan. If in the pursuit to build the ultimate setup you find yourself off-track, we're here to help you get unstuck.

For further information call 07 3180 1470 or email info@kaon.com.au

Disclaimer: The products sold by KAON should not be modified, and are for use only on the vehicles specifically stated. KAON will not be liable for any damages arising out of the use or misuse of it's products. It is the customers responsibility to ensure the products are safely and properly used and installed. KAON consistently seeks to improve it's products and reserves the right to make changes to any product.